

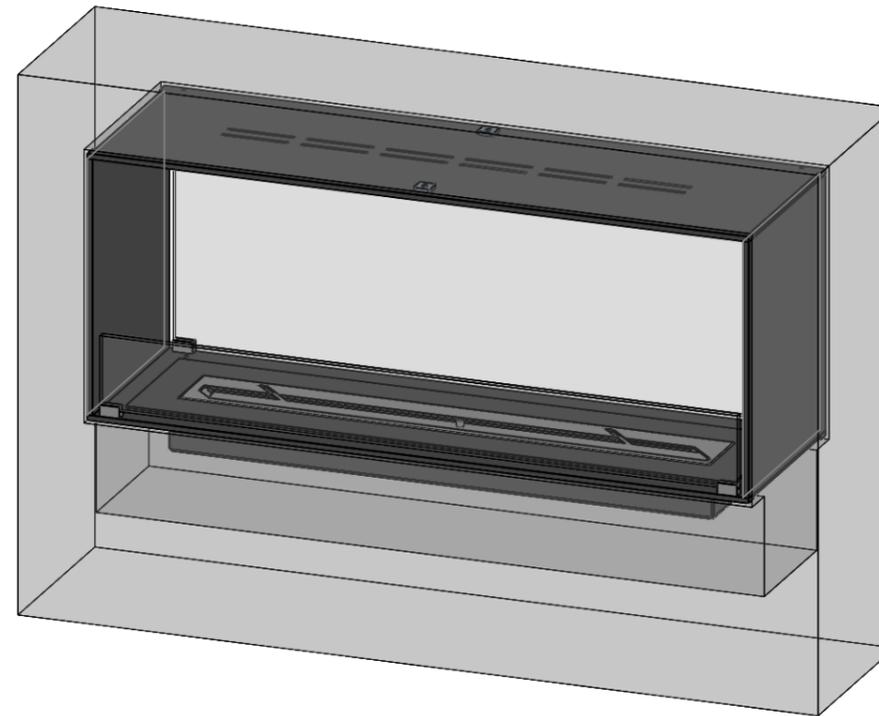


decoflame® Montreal Manual 800 Open front and back
1000x400x308mm, Black
 1x 110mm high glass, Front and 1x full glass, Back
 Wall cut-out "1010x410x308mm"

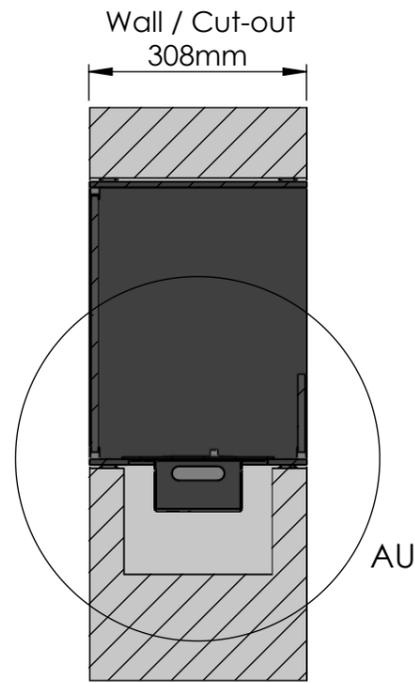


| | | | |
|--|------------|---|--------------------|
| Dimensions are in millimeters | |  DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com | SCALE: 1:10 |
| REVISION: | Date | | FORMAT: A3 |
| - | 24-02-2020 | | Page 1 OF 4 |
| Author: TTK | | Order Number - Customer - Reference: | |
| Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS. | | PRINCIPLE Montreal Front and Back - conv. 1000x400x308mm - 1x MB800mm - low high glass | |
| | | Customer Approval Signature - Date | |

Montreal - Open to front and back

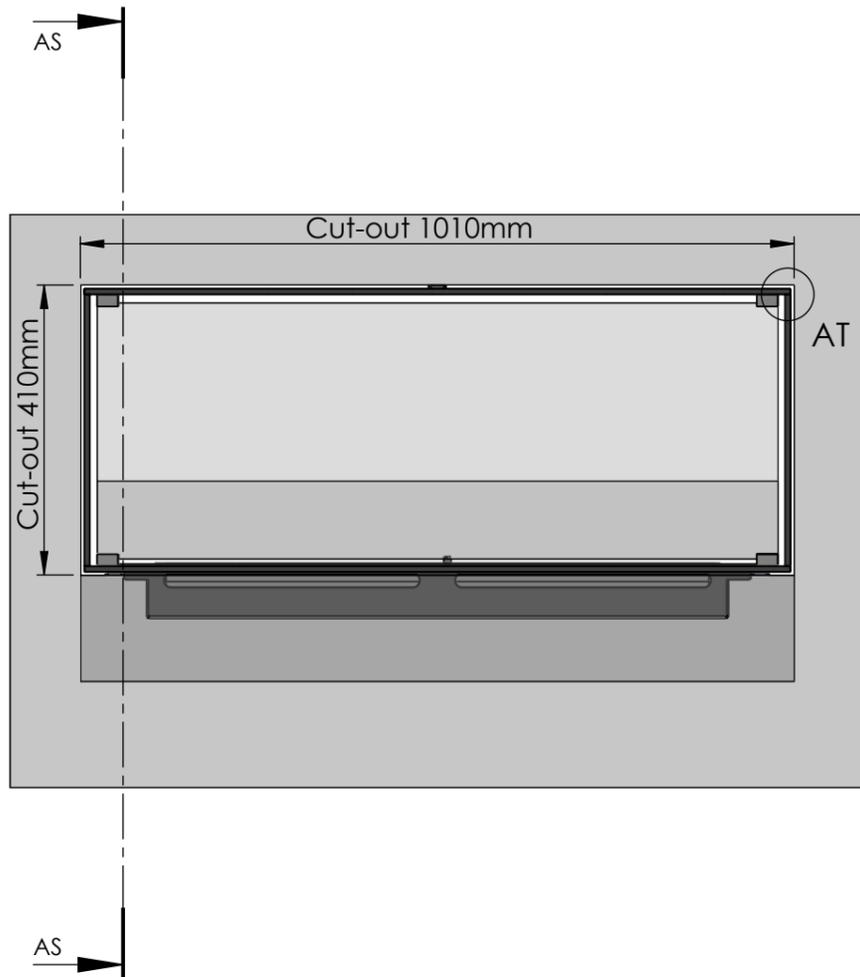



SECTION AS-AS
SCALE 1 : 10

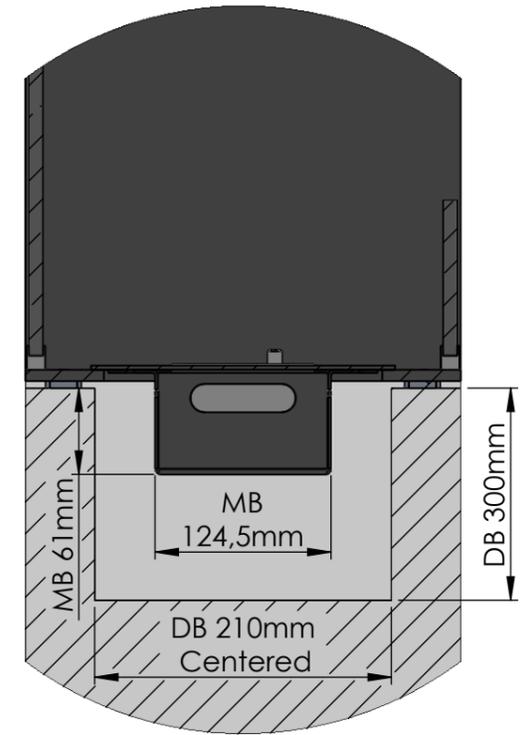

DETAIL AU
SCALE 1 : 5

MB: Manuel Burner
DB: Electrical burner (Denver Basic)

Wall cut-out dimensions

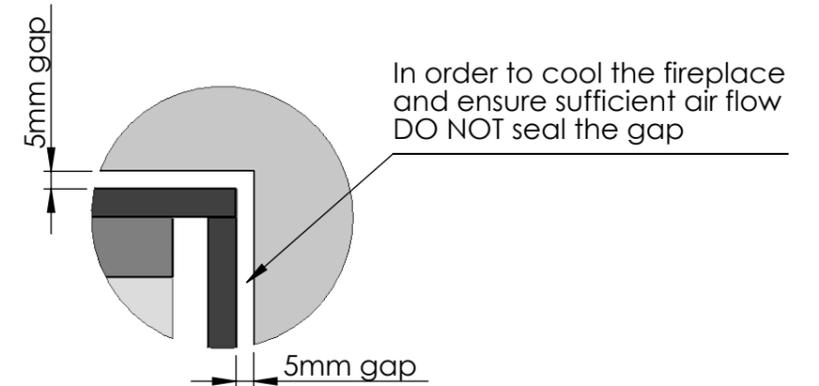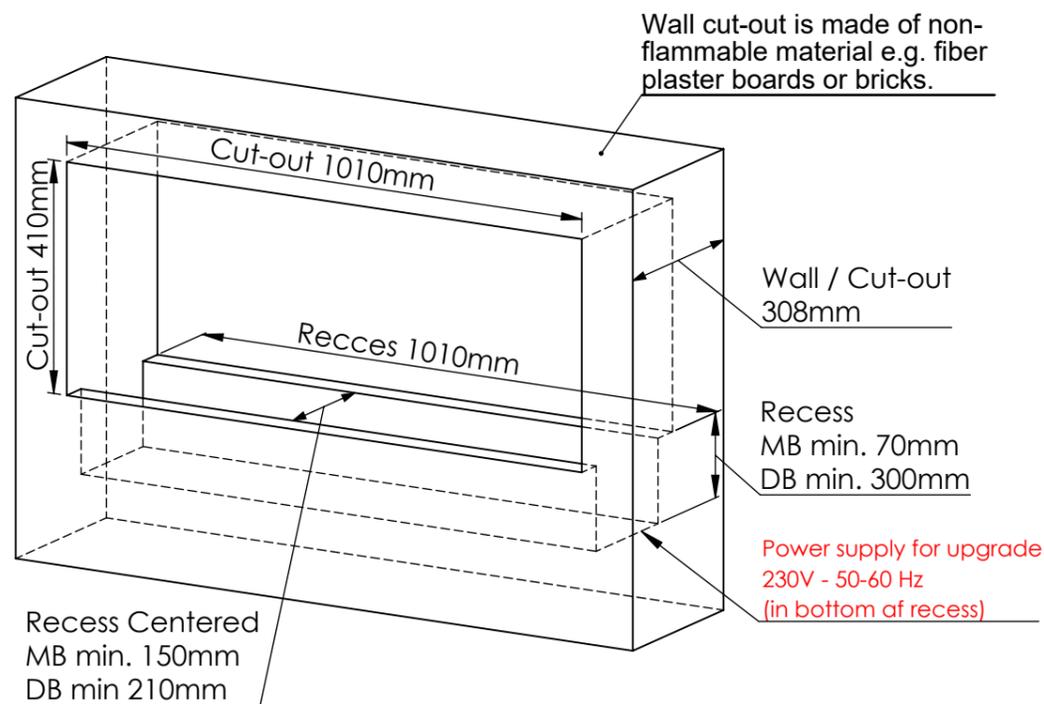




DETAIL AT
SCALE 1 : 2

NOTE

It is possible to change the burner unit, if you want to upgrade your fireplace from a manual burner to an electrical burner

If only a manual burner is required, the recess is: W=150mm D=70mm
By changing from manual burner to electrical burner, the recess is: W=210mm D=150mm

| | | | |
|--|--|--|------------------------------------|
| Dimensions are in millimeters | |  Decoflame ApS Stenholm 14 DK-9400 Nørresundby TLF: +45 96 30 48 00 www.decoflame.com | SCALE: 1:12 |
| MATERIAL: | | | FORMAT: A3 |
| WEIGHT: | | Order Number - Customer - Reference: PRINCIPLE Montreal Front and Back - conv. 1000x400x308mm - 1x MB800mm - low high glass | Page 2 OF 4 |
| REVISION: | | | Customer Approval Signature - Date |
| Copyright of Decoflame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of Decoflame ApS Denmark. | | | |

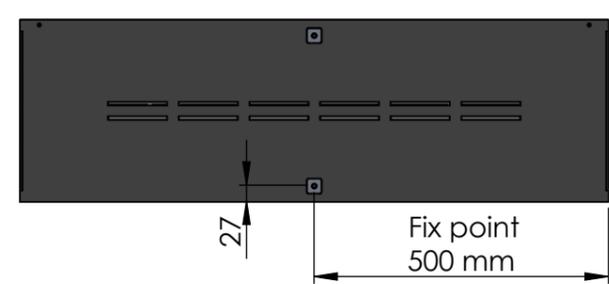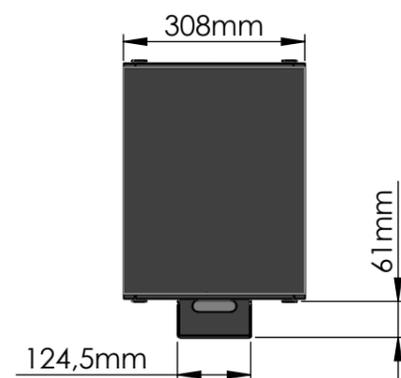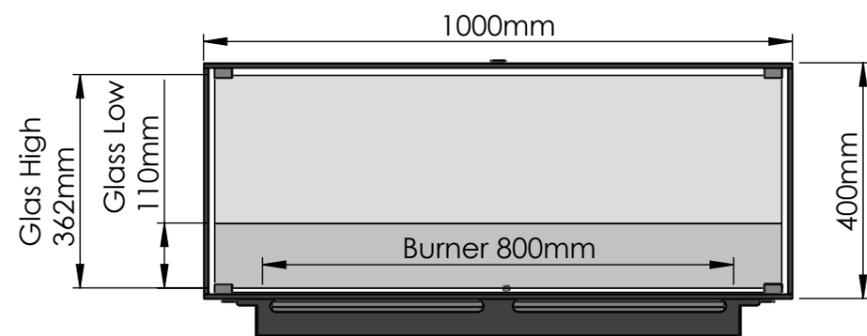

Montreal - Open to front and back

General Installation Guidelines for "decoflame® made to measure fireplaces", open to two sides:

It is essential to maintain a 5mm gap all the way around the fireplace (Cut-out = Fireplace Dimensions + 10mm) This gap must not be sealed.


As the edges of the cut-out remain visible it is important that they are done to the highest possible finish. All four corners of the cut out must have exactly a 90 degree angle.

Plasterboard walls - Stud-walls
All surfaces inside the wall cut-out are to be covered with fibre plaster sheets or other non-inflammable materials.

Stone/Brick walls
The cut-out is made according to the attached drawing.

Important
Make sure to create a closed cavity for the section below the base plate of the fire and above the roof of the fireplace.

Installation process

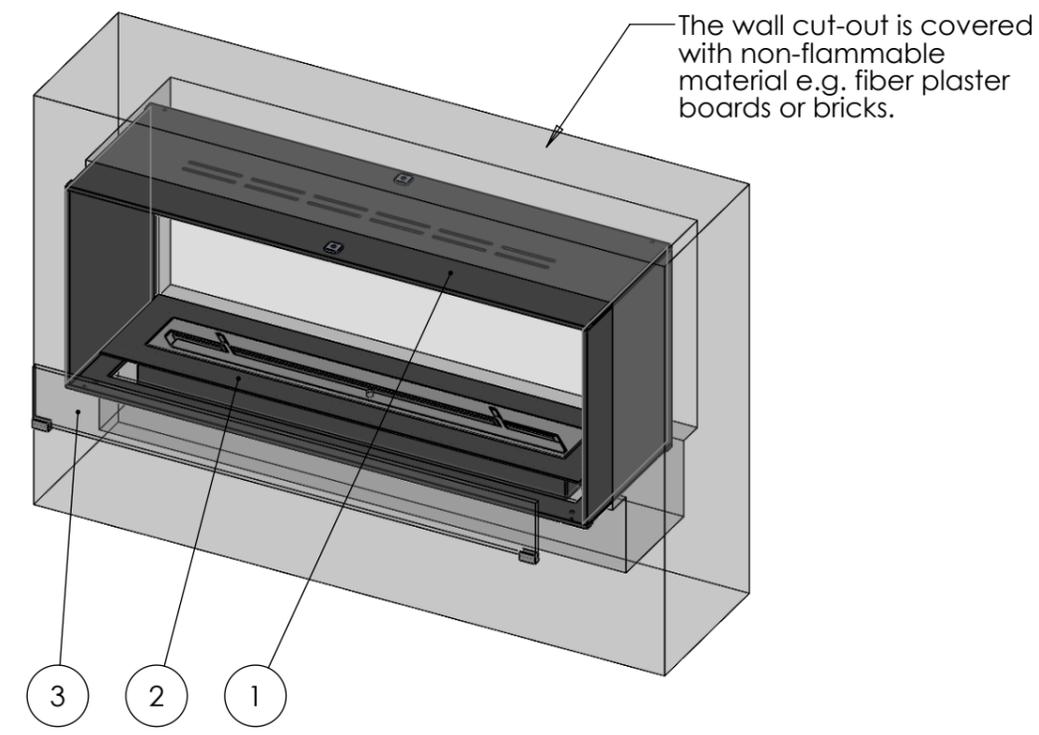


Exploded view showing the installation process.

- Carefully secure the glass with included finger screws. **Important: See drawing for glassmounting by the customer**
- The body of the fireplace is centered in the wall cut out. Secured with the included fasteners. Depending on type the of wall use suited wall plugs.
- The burner is placed in the safety chamber.


| | | | |
|--|--|--|------------------------------------|
| Dimensions are in millimeters | |  Decoflame ApS Stenholm 14 DK-9400 Nørresundby TLF: +45 96 30 48 00 www.decoflame.com | SCALE: 1:10 |
| MATERIAL: | | | FORMAT: A3 |
| WEIGHT: | | Order Number - Customer - Reference: PRINCIPLE Montreal Front and Back - conv. 1000x400x308mm - 1x MB800mm - low high glass | Page 3 OF 4 |
| REVISION: | | | Customer Approval Signature - Date |
| Copyright of Decoflame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of Decoflame ApS Denmark. | | | |

IMPORTANT INFORMATION


Particulars of the wall in which the fireplace shall be installed

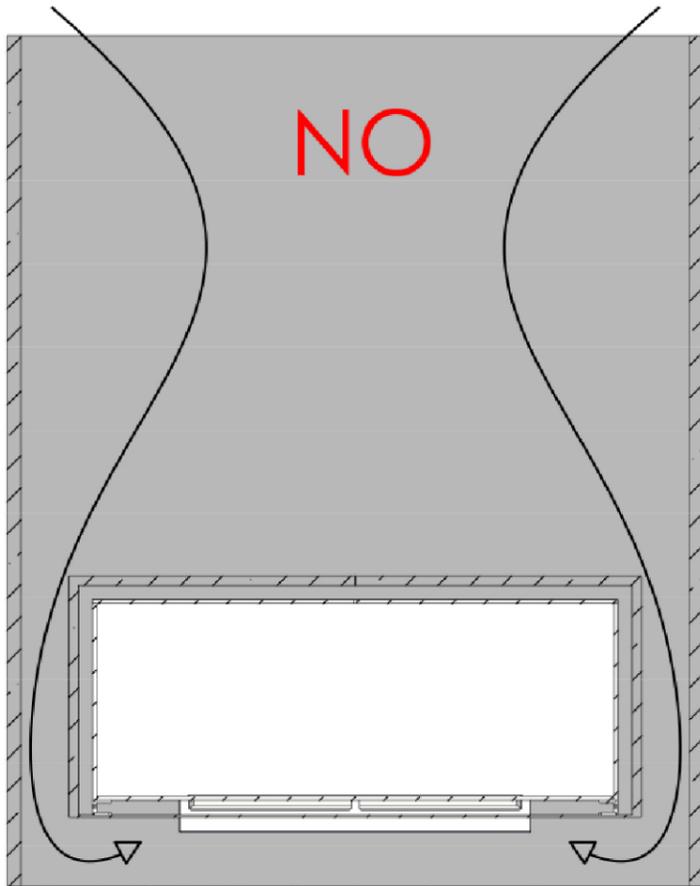

DO NOT! install the fireplace in a wall construction which is open above and below the fireplace. The warm air will cause turbulences inside this hollow construction which will have a negative impact on the flames.

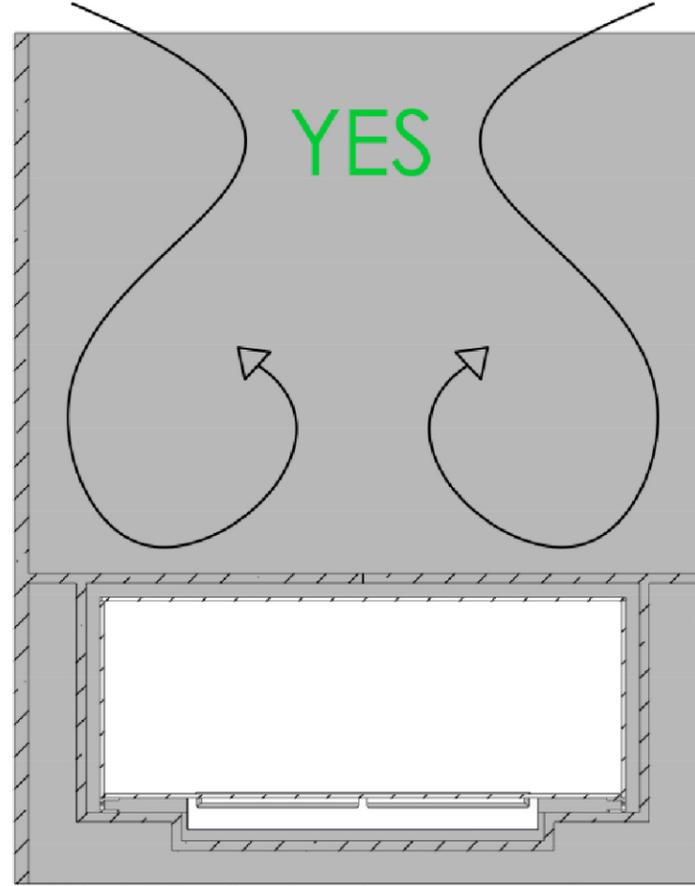

DO! install the fireplace in an open-wall construction, which is closed above and below the fireplace. Make sure to create a closed cavity for the section below the base plate of the fire.

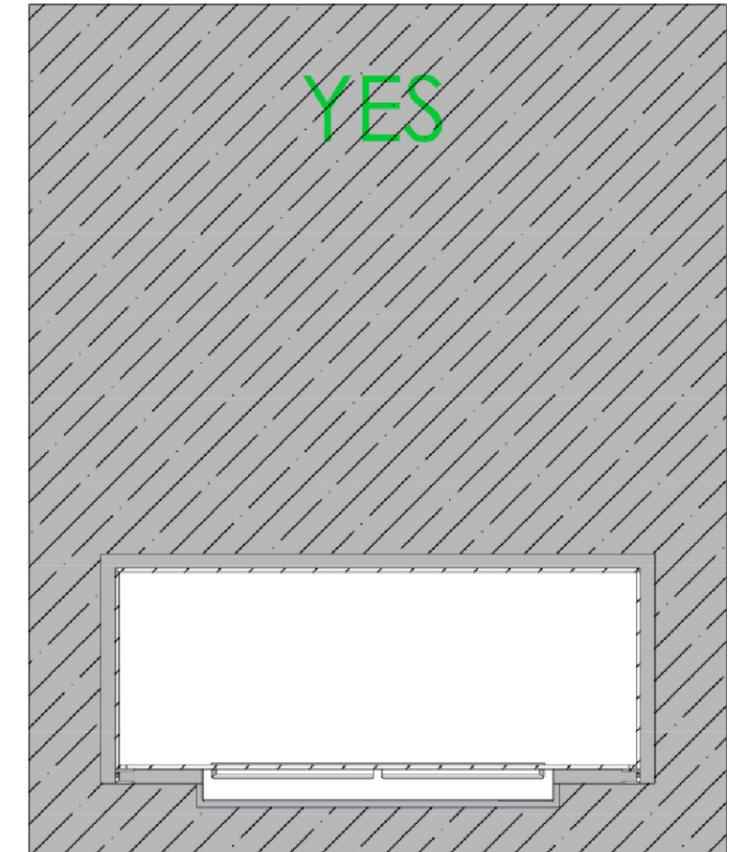

DO! install the fireplace in a massive wall (made of bricks, stone or gas beton) using the wall cut-out dimensions mentioned on the previous page.

| | | | |
|--|--------------------|---|------------------------------------|
| Dimensions are in millimeters | |  DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com | SCALE: 1:10 |
| REVISION: - | Date 24-02-2020 | | FORMAT: A3 |
| Author: TTK | | Order Number - Customer - Reference: | Page 4 OF 4 |
| Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS. | | PRINCIPLE Montreal Front and Back - conv. 1000x400x308mm - 1x MB800mm - low high glass | Customer Approval Signature - Date |