


decoflame® Montreal Vue Manual 900

Open front and back

1200x800x400mm, Black


2x 110mm low glass / 2x high glass

Wall cut-out "1210x810x400mm"



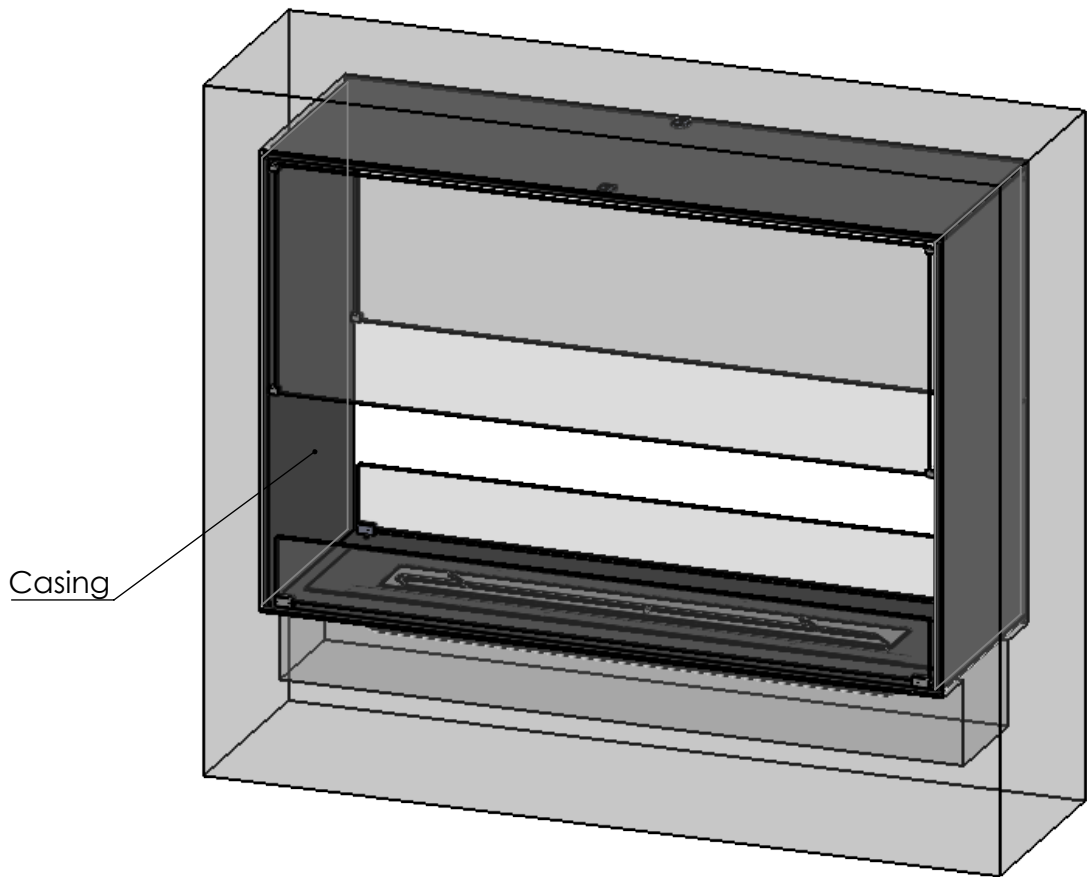


Casing Addition:  
Black / Brushed cobber / Polished copper / Brushed brass /  
Polished brass / Polished stainless steel

**ATTENTION**  
Reservations are made for glass tolerances  
both in length and height of ± 2.5mm  
and in thickness of ± 0.3mm according to  
DS/EN 12150.


Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	SCALE: 1:10
REVISION:	Date		FORMAT: A3
	04-12-2020		Page 1 OF 4
Author: TTK		Order Number - Customer - Reference:  PRINCIPLE Montreal Vue Front and Back - conv. 1200x800x400mm - 1x MB900 - 2x low glass 2x high glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	

Montreal - Open to front and back

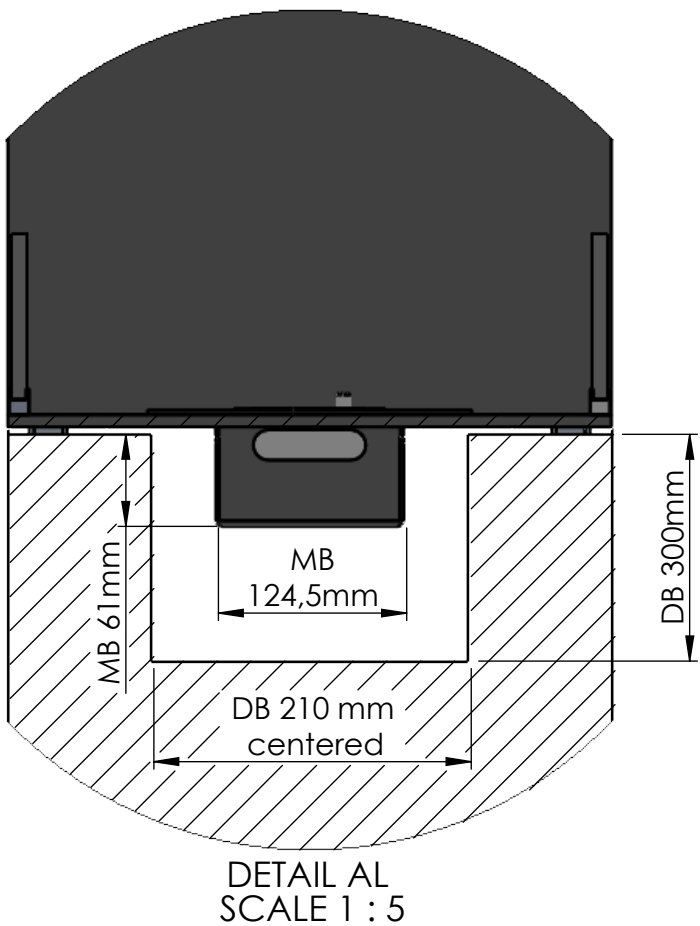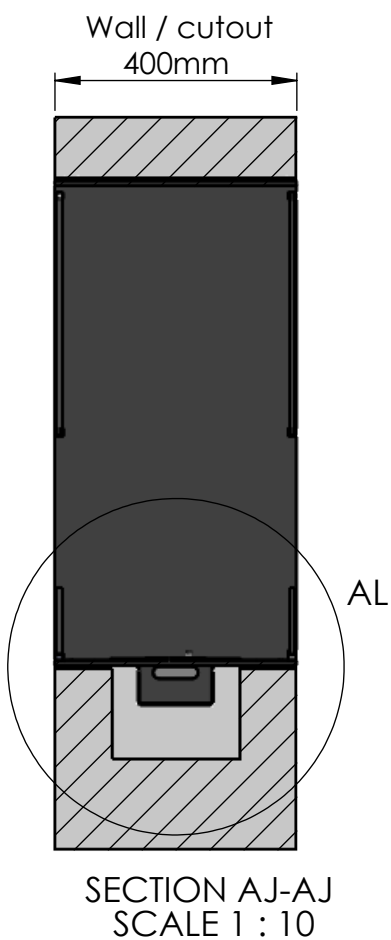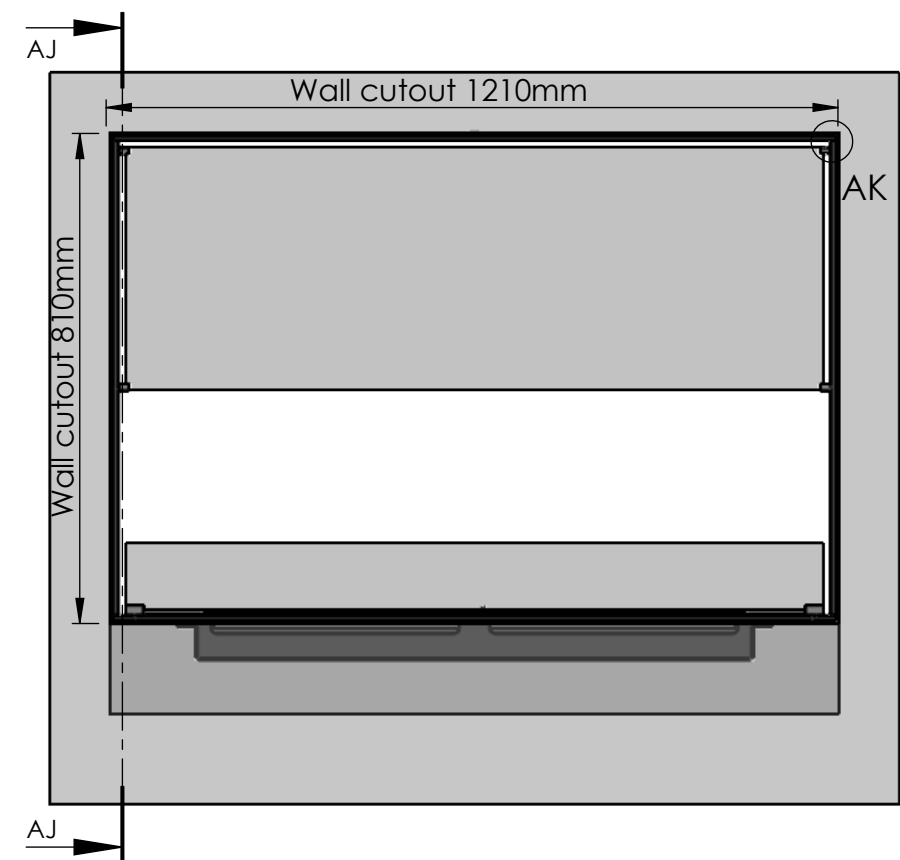

MB: Manuel Burner  
DB: Electrical burner (Denver Basic)

Wall cut-out dimensions

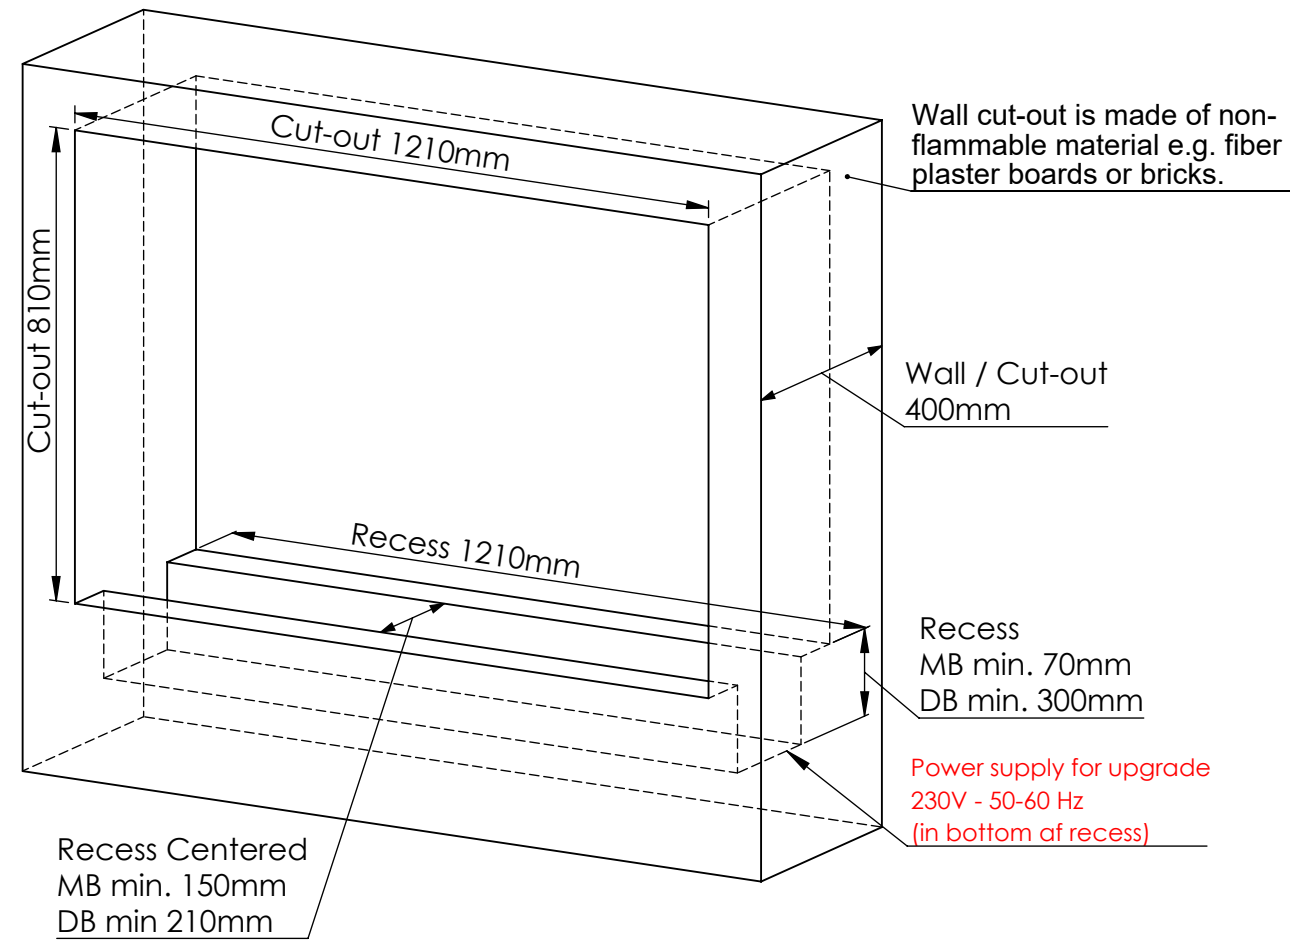

Wall cut-out is made of non-flammable material e.g. fiber plaster boards or bricks.

Wall / Cut-out 400mm

Recess MB min. 70mm  
DB min. 300mm


Power supply for upgrade 230V - 50-60 Hz (in bottom of recess)

Recess Centered MB min. 150mm  
DB min 210mm


NOTE


It is possible to change the burner unit, if you want to upgrade your fireplace from a manuel burner to an electrical burner

If only a manual burner is required, the recess is: W=150mm D=70mm  
By changing from manuel burner to electrical burner,the recess is: W=210mm D=150mm

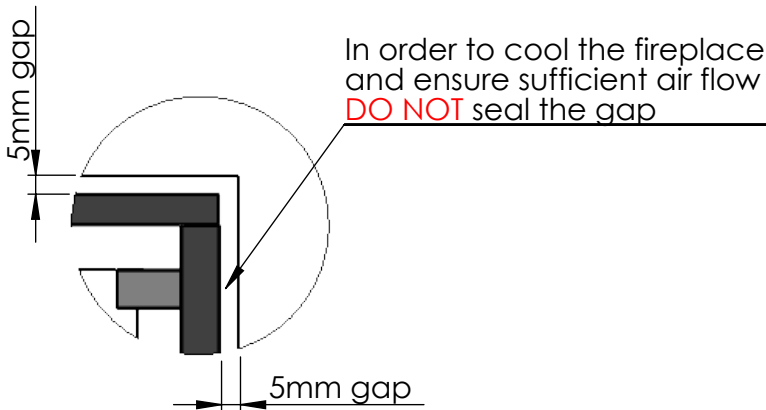

DETAIL AK  
SCALE 1 : 2

Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	SCALE: 1:12
REVISION:	Date 04-12-2020		FORMAT: A3
Author: TTK		Order Number - Customer - Reference: PRINCIPLE Montreal Vue Front and Back - conv. 1200x800x400mm - 1x MB900 - 2x low glass 2x high glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	

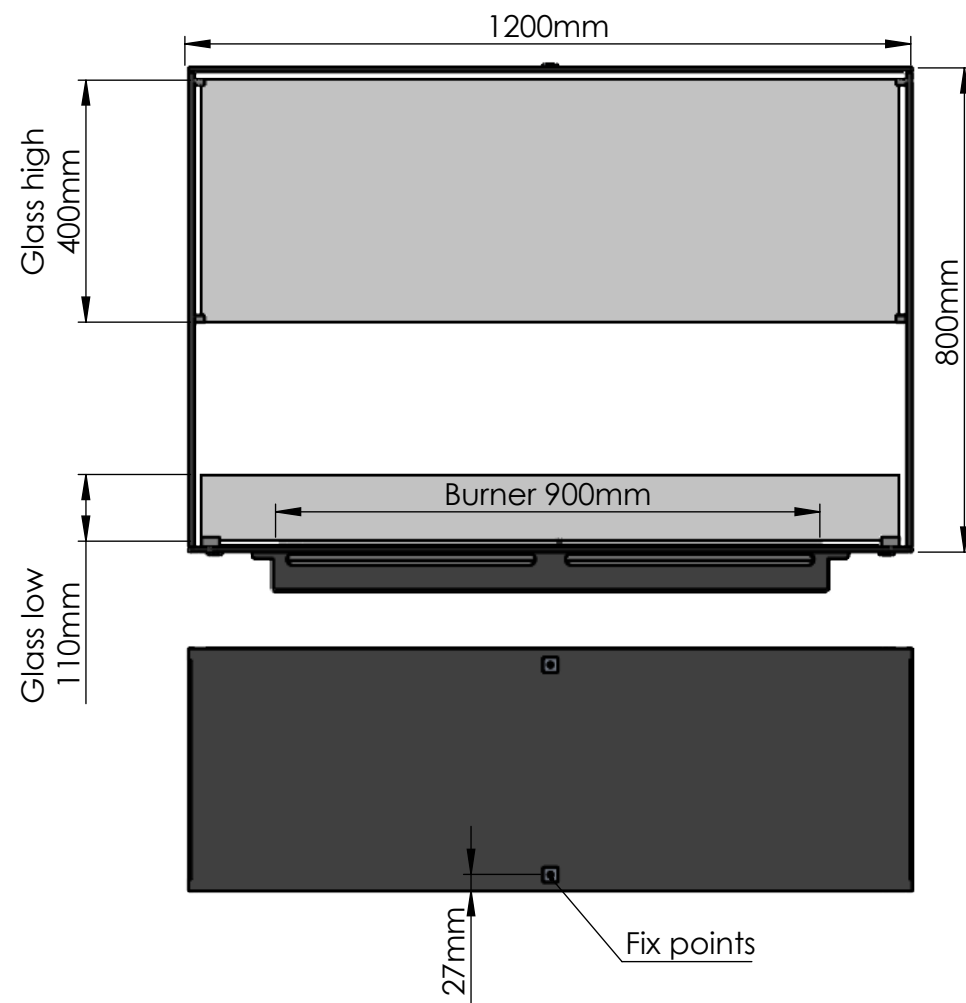

Montreal - Open to front and back

## General Installation Guidelines for "decoflame® made to measure fireplaces", open to two sides:

It is essential to maintain a 5mm gap all the way around the fireplace (Cut-out = Fireplace Dimensions + 10mm) This gap must not be sealed.

As the edges of the cut-out remain visible it is important that they are done to the highest possible finish. All four corners of the cut out must have exactly a 90 degree angle.

### Plasterboard walls - Stud-walls

All surfaces inside the wall cut-out are to be covered with fibre plaster sheets or other non-inflammable materials.


### Stone/Brick walls

The cut-out is made according to the attached drawing.

### Important


Make sure to create a closed cavity for the section below the base plate of the fire and above the roof of the fireplace.

## Installation process

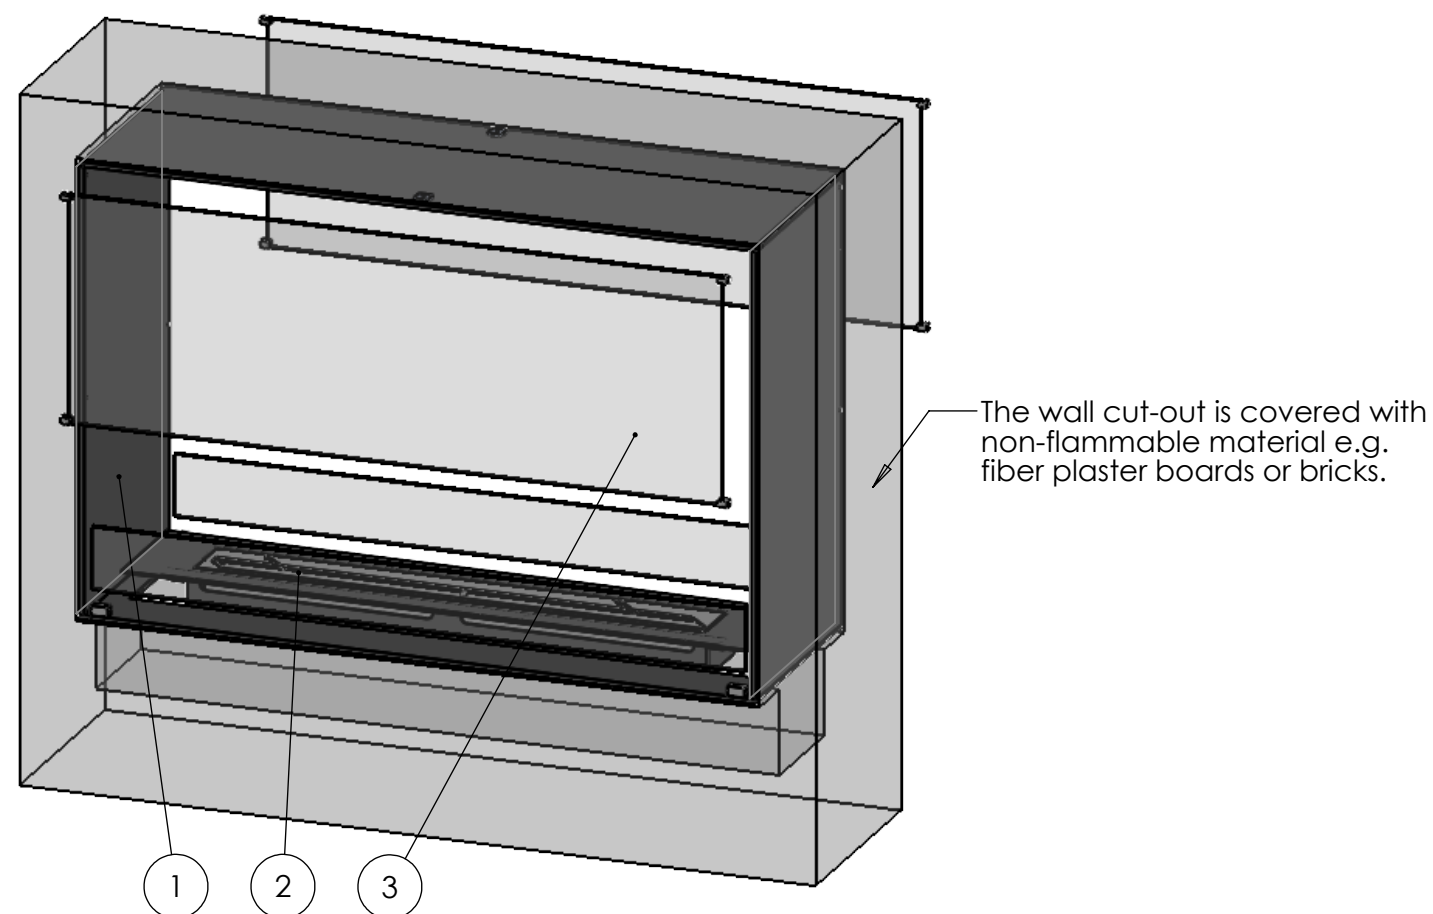


## Exploded view showing the installation process.

1. The body of the fireplace is centered in the wall cut out.  
Secured with the included fasteners.  
Depending on type the of wall use suited wall plugs.
2. The burner is placed in the safety chamber.
3. Carefully secure the glass with the 4 included finger screws.  
**Remember rubber seals between screw and glass.**


Dimensions are in millimeters		 DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com	SCALE: 1:10
REVISION:	Date 04-12-2020		FORMAT: A3
Author: TTK		Order Number - Customer - Reference: PRINCIPLE Montreal Vue Front and Back - conv. 1200x800x400mm - 1x MB900 - 2x low glass 2x high glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	

IMPORTANT INFORMATION


Particulars of the wall in which the fireplace shall be installed

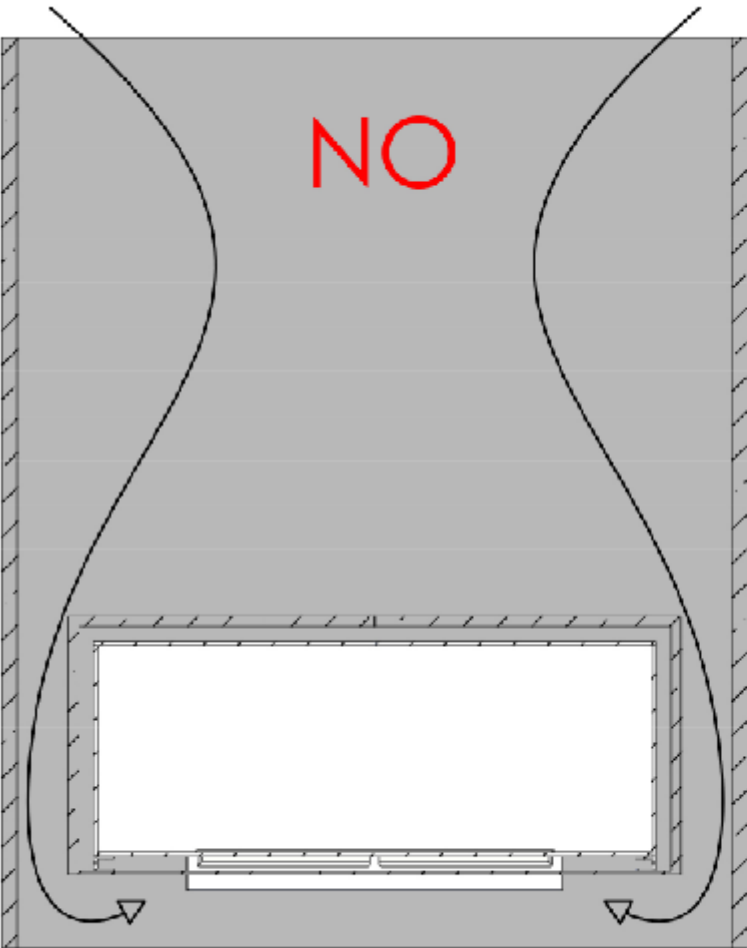


**DO NOT!** install the fireplace in a wall construction which is open above and below the fireplace. The warm air will cause turbulences inside this hollow construction which will have a negative impact on the flames.

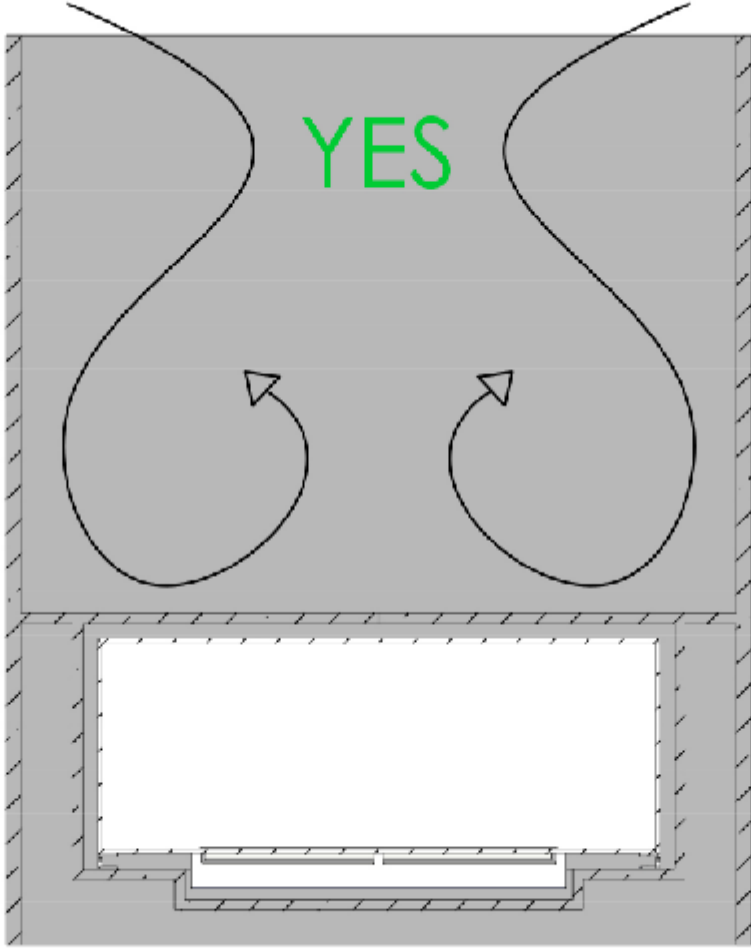

**DO!** install the fireplace in an open-wall construction, which is closed above and below the fireplace. Make sure to create a closed cavity for the section below the base plate of the fire.

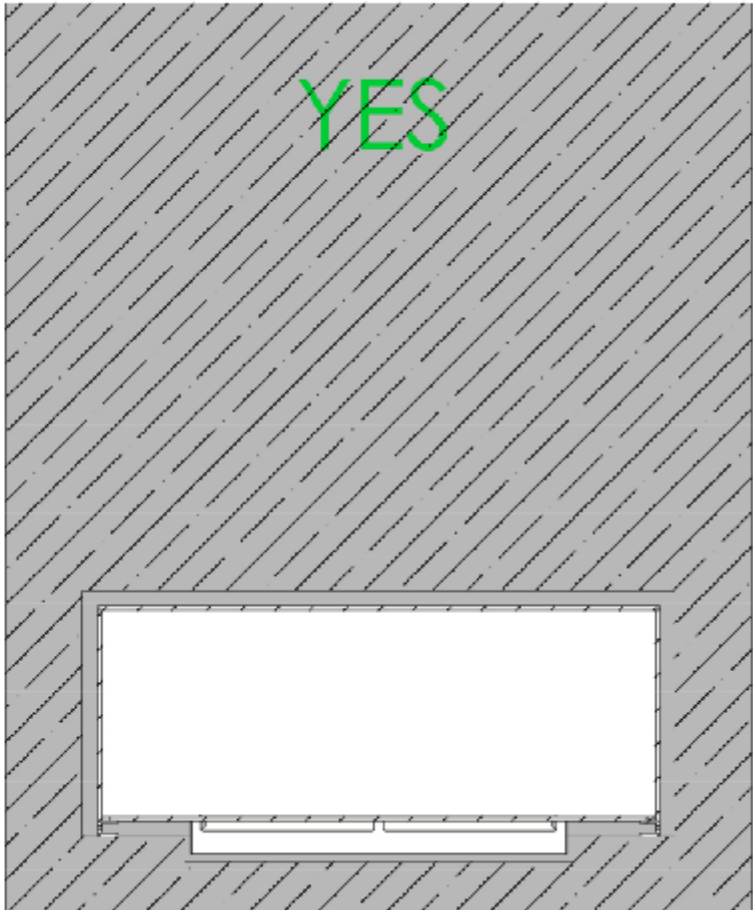

**DO!** install the fireplace in a massive wall (made of bricks, stone or gas beton) using the wall cut-out dimensions mentioned on the previous page.

Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	SCALE: 1:10
REVISION:	Date		FORMAT: A3
	04-12-2020		Page 4 OF 4
Author: TTK		Order Number - Customer - Reference:  PRINCIPLE Montreal Vue Front and Back - conv. 1200x800x400mm - 1x MB900 - 2x low glass 2x high glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	