



decoflame® Orlando Manuel 800mm Open to front
1000x400x300mm, BlackFrame 50x5mm Black
1x 110mm low glass
Wall cut-out "1010x410x308mm"



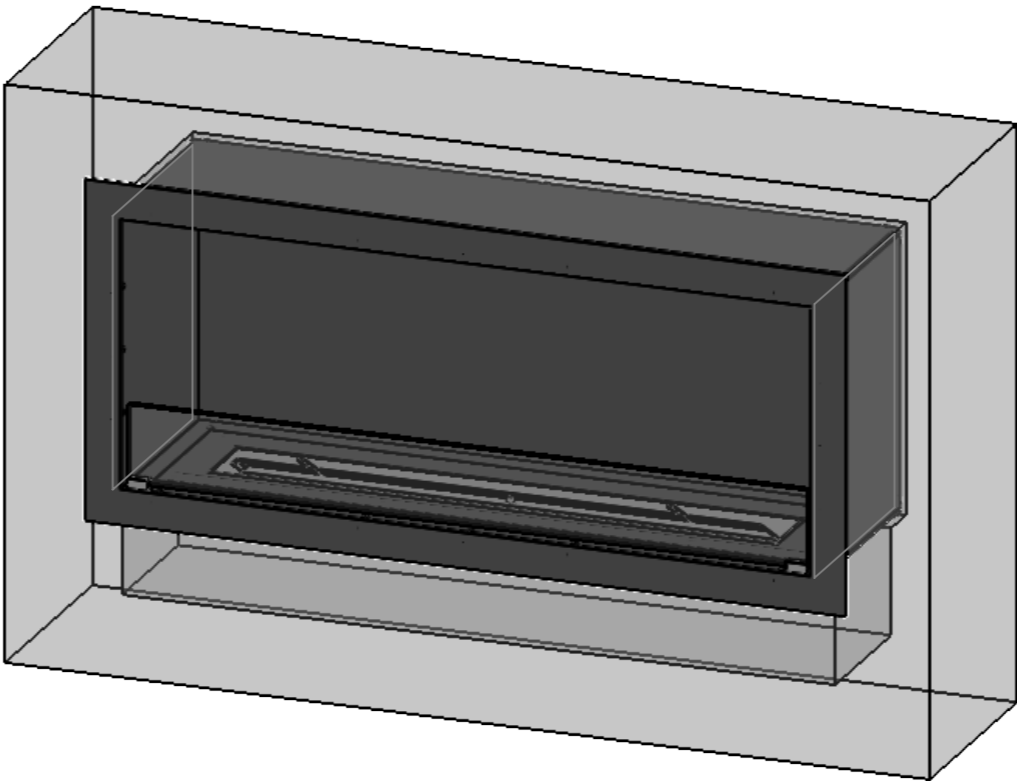


ATTENTION

Reservations are made for glass tolerances both in length and height of $\pm 2.5\text{mm}$ and in thickness of $\pm 0.3\text{mm}$ according to DS/EN 12150.


Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	SCALE: 1:10
REVISION:	Date		FORMAT: A3
-	10-06-2020		Page 1 OF 4
Author: TTK		Order Number - Customer - Reference: PRINCIPLE Orlando Front - conv. 1000x400x300mm - 1x MB800 - low glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	

Orlando Manuel - Open to front

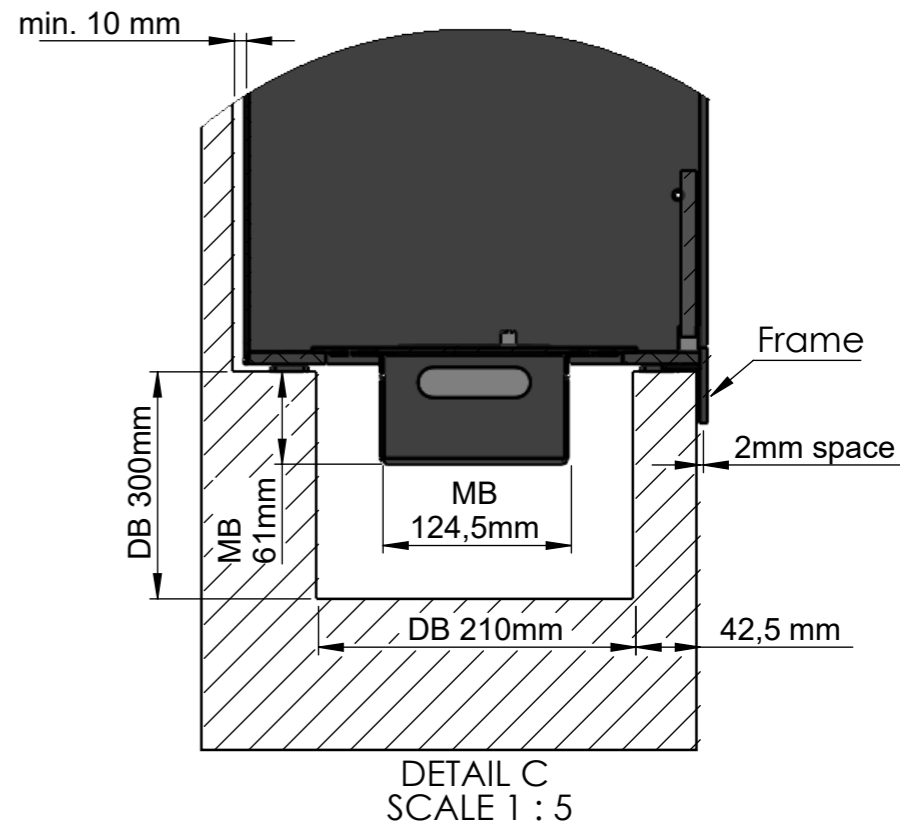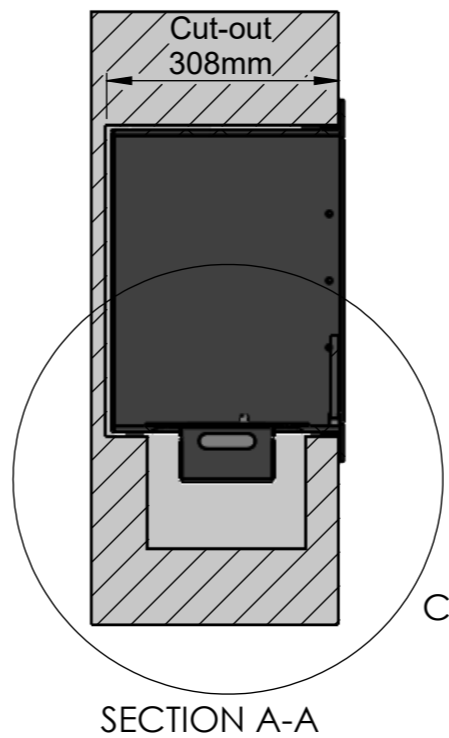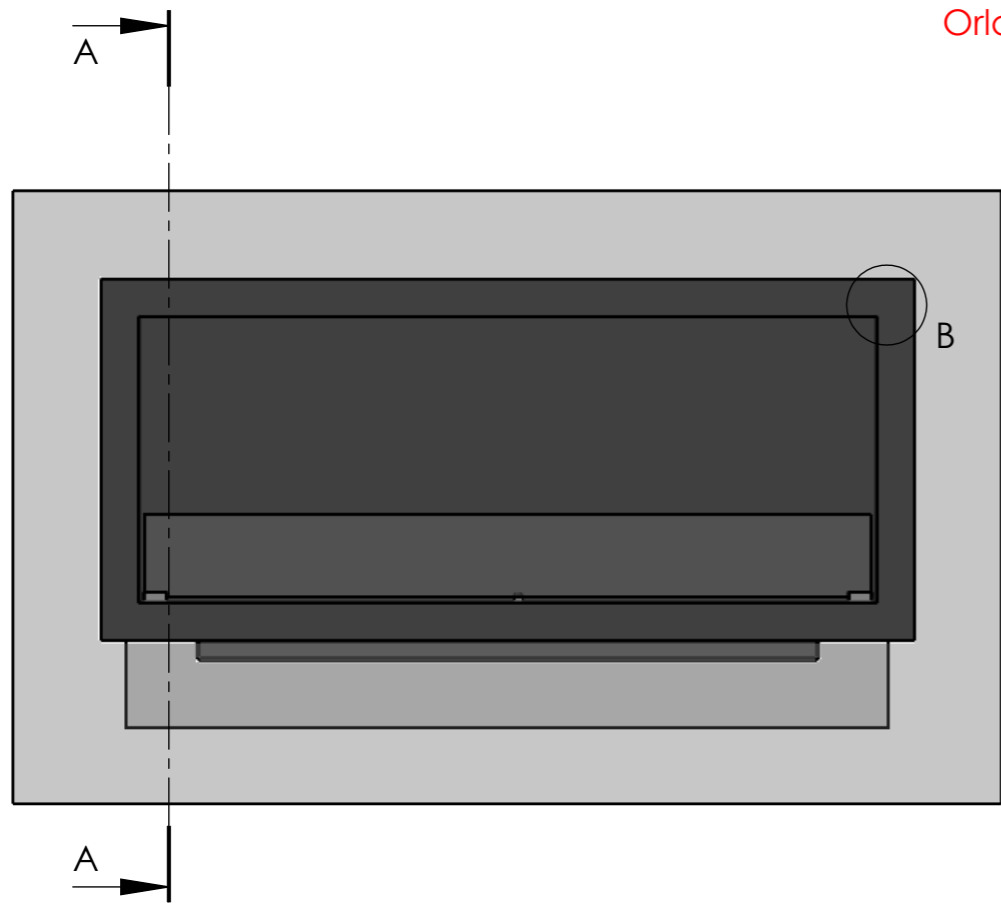

MB: Manuel Burner
DB: Electrical burner (Denver Basic)

Wall dimensions

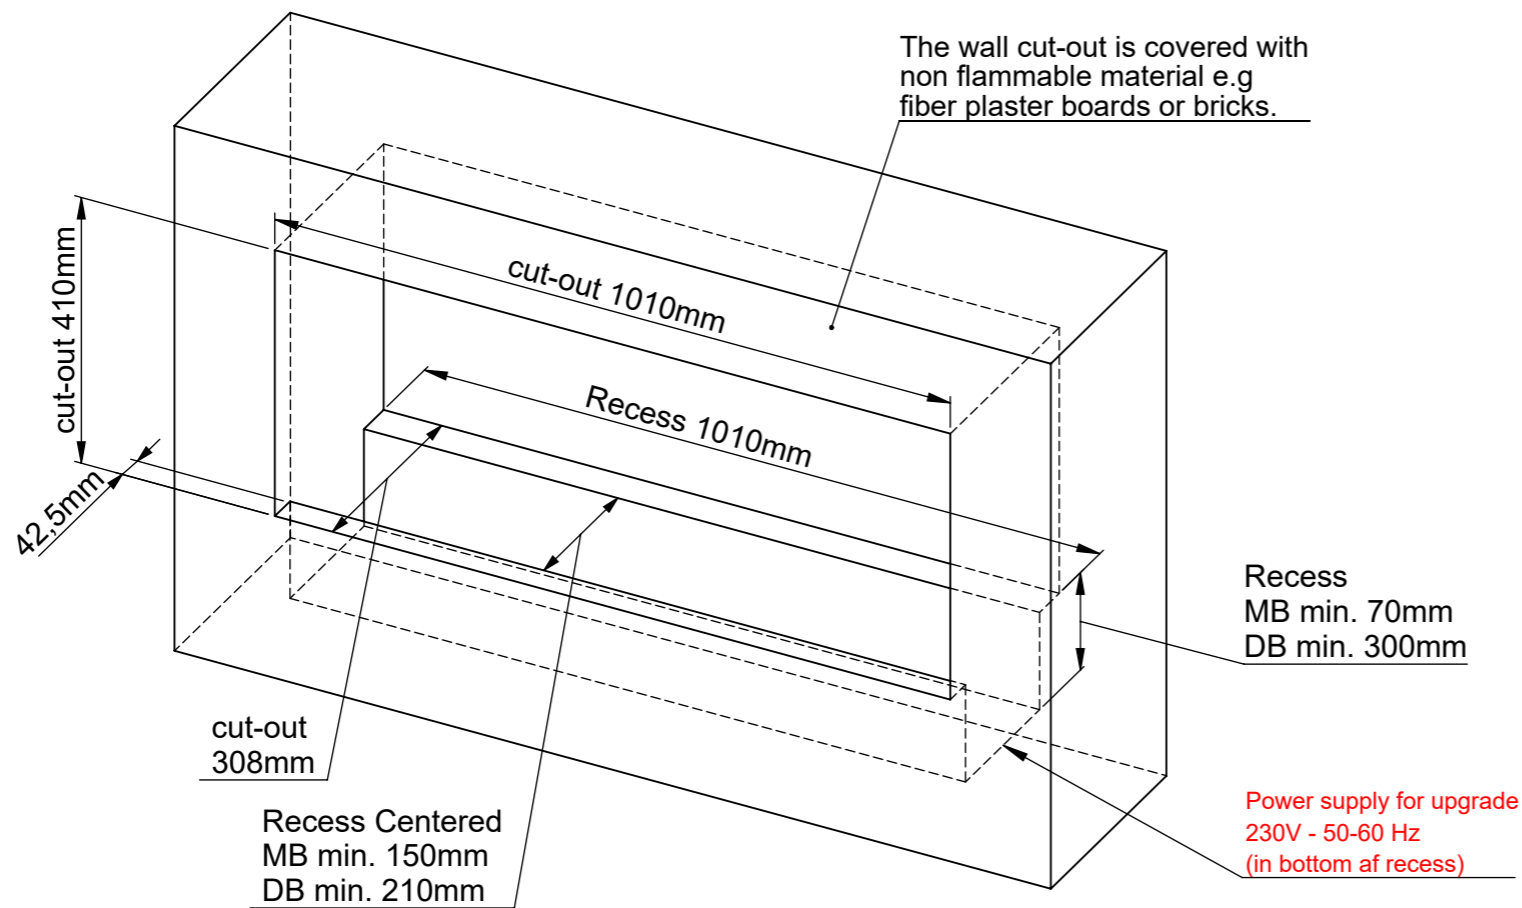



NOTE

it is possible to change the burner unit, if you want to upgrade your fireplace from a manuel burner to an electrical burner




If only a manual burner is required, the recess is: W=150mm D=70mm
By changing from manuel burner to electrical burner,the recess is: W=210mm D=150mm

View with-out frame

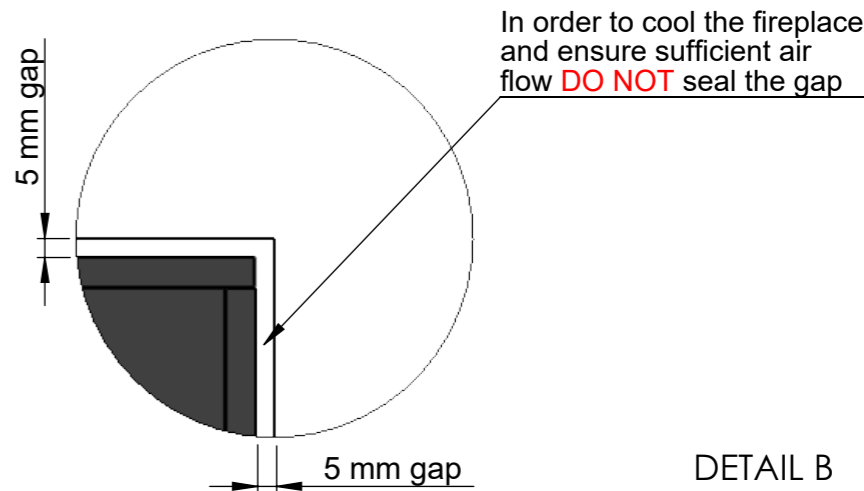

Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	SCALE: 1:10
REVISION: -	Date 10-06-2020		FORMAT: A3
Author: TTK		Order Number - Customer - Reference: PRINCIPLE Orlando Front - conv. 1000x400x300mm - 1x MB800 - low glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	

View with-out frame

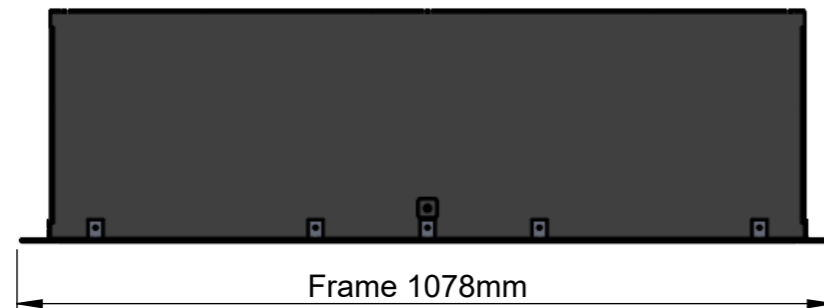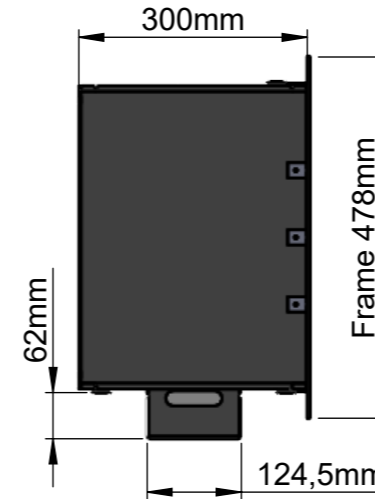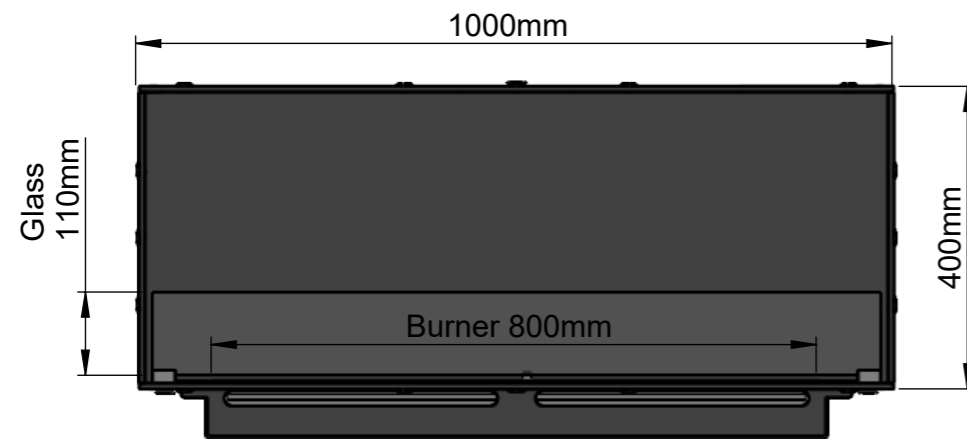

Orlando Manual - Open to front

General Installation Guidelines for “decoflame® made to measure fireplaces”:

The wall cut-out is made at least 20mm deeper than the depth of the fireplace to ensure sufficient air flow and cooling of the fireplace. Furthermore, it is essential to maintain a 5mm gap all the way around the fireplace (Cut-out = Fireplace Dimensions + 10mm) This gap must not be sealed.

As the edges of the cut-out remain visible it is important that they are done to the highest possible finish. All four corners of the cut out must have exactly a 90 degree angle.

Plasterboard walls - Stud-walls

All surfaces inside the wall cut-out are to be covered with fibre plaster sheets or other non-inflammable materials.


Stone/Brick walls

The cut-out is made according to the attached drawing.

Important

Make sure to create a closed cavity for the section below the base plate of the fire and above the roof of the fireplace.

Installation process

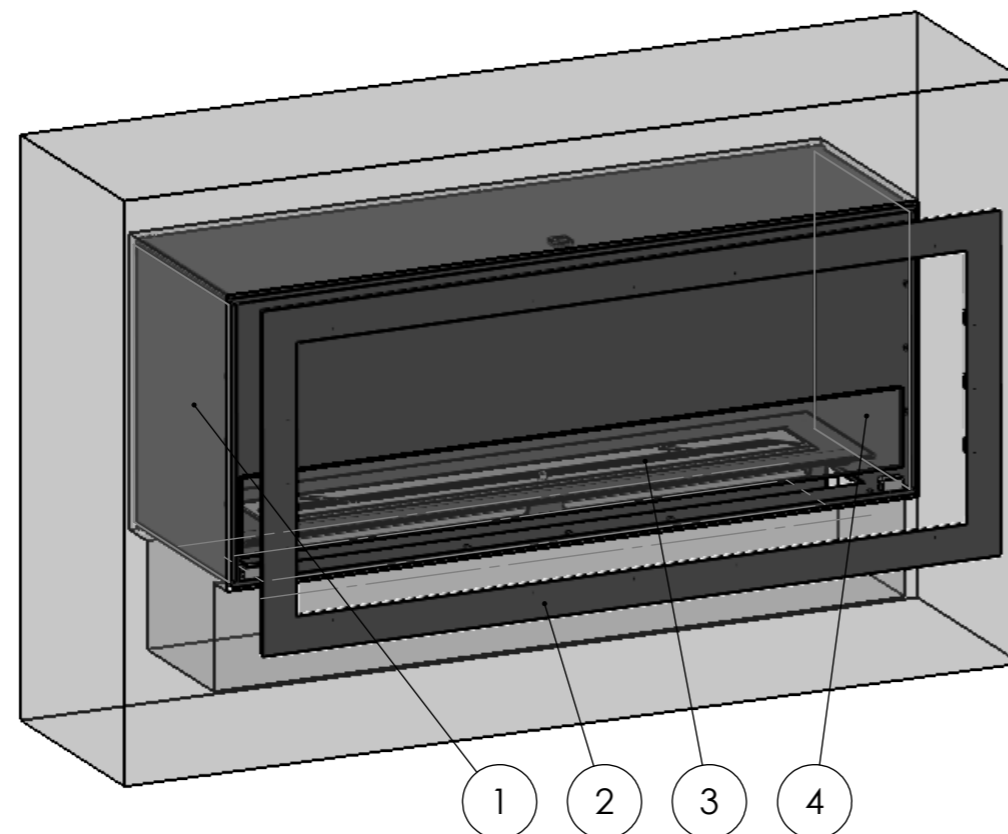


Exploded view showing the installation process.

1. The chassis of the fireplace (top/sides/bottom) is centered in the wall cut-out.
Use suited wall plugs depending on the type of wall.


Remember Glassholders must be monted first

2. The frame mounted inside with M5 screws
3. The fireplace lowered into the recess.
4. Gently place the glass


Dimensions are in millimeters		 DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com	SCALE: 1:10
REVISION:	Date		FORMAT: A3
-	10-06-2020		Page 3 OF 4
Author: TTK		Order Number - Customer - Reference: PRINCIPLE Orlando Front - conv. 1000x400x300mm - 1x MB800 - low glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	

IMPORTANT INFORMATION


Particulars of the wall in which the fireplace shall be installed

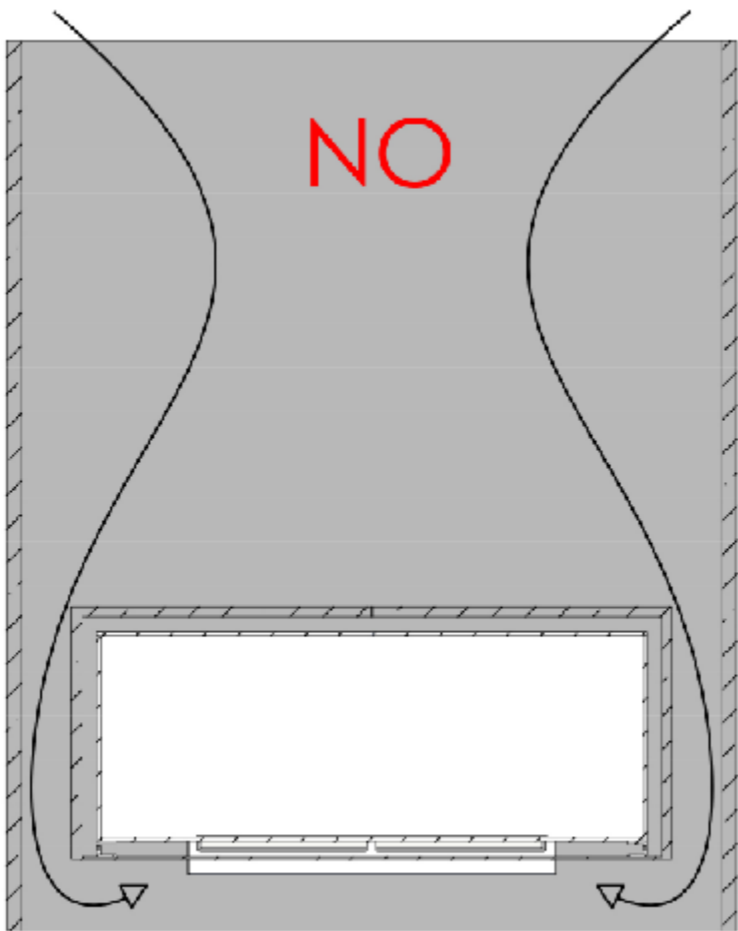


DO NOT! install the fireplace in a wall construction which is open above and below the fireplace. The warm air will cause turbulences inside this hollow construction which will have a negative impact on the flames.

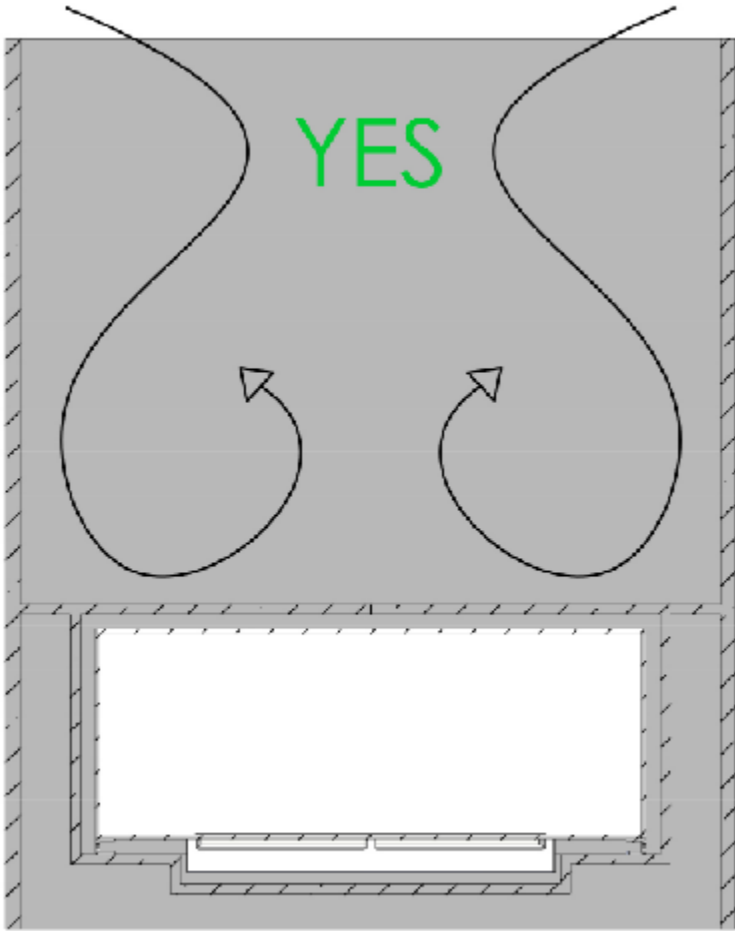

DO! install the fireplace in an open-wall construction, which is closed above and below the fireplace. Make sure to create a closed cavity for the section below the base plate of the fire.

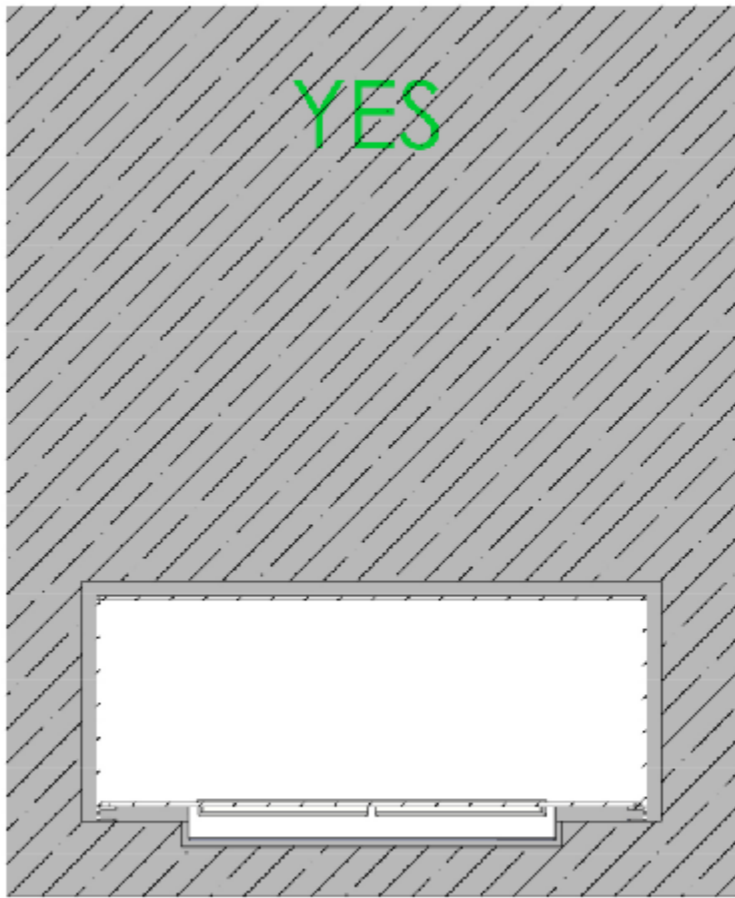

DO! install the fireplace in a massive wall (made of bricks, stone or gas beton) using the wall cut-out dimensions mentioned on the previous page.

Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	SCALE: 1:10
REVISION: -	Date 10-06-2020		FORMAT: A3
Author: TTK		Order Number - Customer - Reference: PRINCIPLE Orlando Front - conv. 1000x400x300mm - 1x MB800 - low glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	